 
 



Epson pin out	
Pin Number	Signal Name
1	Frame GND
2	Drawer kik-out drive signal 1
3	Drawer open / close signal
4	+24 V / +12 V
5	Drawer kik-out drive signal 2
6	Signal GND

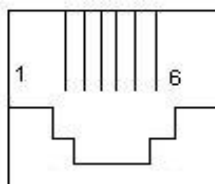

SHTRIH pin out ORIGINAL	
Pin Number	Signal Name
1	Frame GND
2	+24 V / +12 V
3	Drawer kik-out drive signal 2
4	Signal GND
5	Drawer open / close signal
6	Drawer kik-out drive signal 1

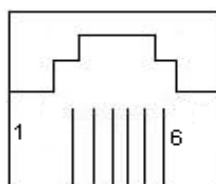

SHTRIH pin out INVERTED	
Pin Number	Signal Name
1	Drawer kik-out drive signal 1
2	Drawer open / close signal
3	Signal GND
4	Drawer kik-out drive signal 2
5	+24 V / +12 V
6	Frame GND

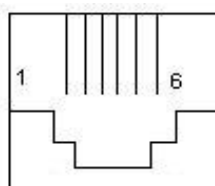 

Pin Number	Signal Name	Epson pin	Shtrich pin Inverted
1	Frame GND	1	6
2	Drawer kik-out drive signal 1	2	1
3	Drawer open / close signal	3	2
4	+24 V / +12 V	4	5
5	Drawer kik-out drive signal 2	5	4
6	Signal GND	6	3